


Parts Identification Guide  
PIC019/0305

# Access Loader



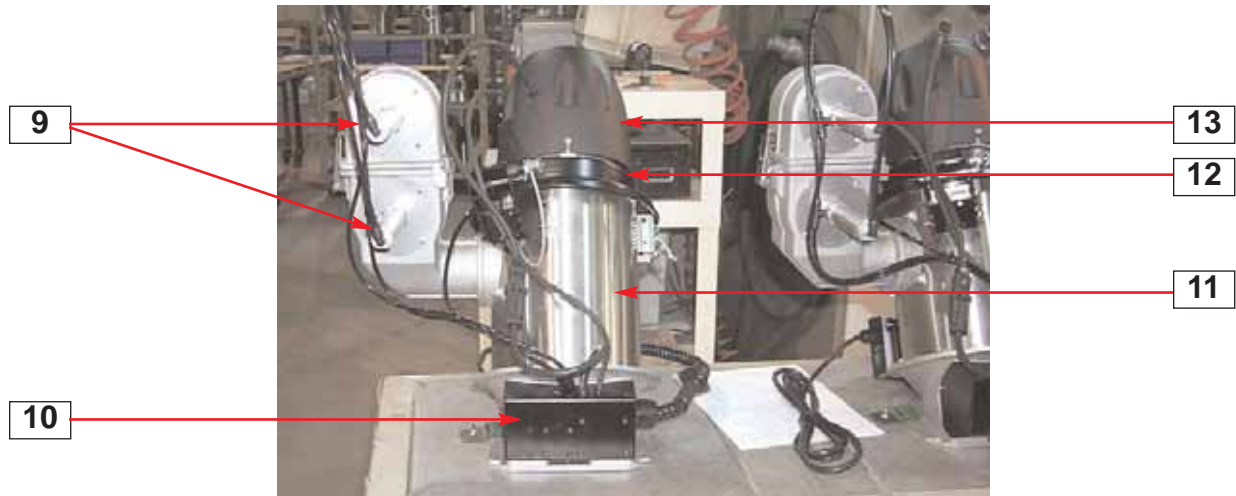

**Access Loader**

- 1. Ratio Valve
- 2. Solenoid Valve
- 3. Filter
- 4. Control
- 5. Clamps (3 required)
- 6. Line Adapters
- 7. Seals Inside
- 8. Motor & Lid Assembly
- 9. Air Cylinders
- 10. Terminal Box
- 11. Loader Body
- 12. Lid
- 13. Motor Cover



**Access Loader**

- 2. Solenoid Valve
- 4. Control
- 5. Clamps (3 required)
- 11. Loader Body
- 12. Lid
- 14. Vacuum Motor (under cover)
- 15. Hose Clamp
- 16. Rubber Seal
- 17. Discharge Flapper